

HOOOLIGAN® V2

SPECIALIZED NO LET-OFF SYSTEM

Choose the 40# or 50# cam post for optimal efficiency and power

CUSTOMIZABLE TO ANY SHOOTER

Nearly limitless draw length and wide open
draw weight range

EASY IN-FIELD ADJUSTMENT

Stainless steel barrel nuts allow smooth draw
weight adjustment

HEAVY-WALL, DEEP-V CAMS

For string control during frantic draws on fleeting fish



The RAP Cam System (Rapid Adjustment Post) is a specialized, no let-off system, that is exclusive to the Hooligan® V2. Due to the ability to change from one draw weight post to the other, the V2 is like two bows in one. Cam posts marked 40# and 50# provide a perfect draw-force curve shooting system.

While the bow has a wide-open draw weight range of 24-50#, the archer controls the power and efficiency by using the appropriate cam post for their needs. For optimal performance at 24-40# of draw, the post marked 40# on each cam should be used. A bow with the string on the 40# posts will be at 40# with the limb bolts turned tight. This bow will perform better and be more efficient than a bow using the 50# posts with the limb bolts backed all the way out. For optimal performance above 40# draw, use the 50# post on each cam.

Adjusting the Draw Weight: The Hooligan is a constant draw bow and can be shot at any draw length. Using a 3/16" hex wrench, place the wrench at 12 o'clock position in the upper limb bolt and turn it one full turn, counterclockwise to decrease weight or clockwise to increase weight. Repeat with the lower bolt. The limb bolts on each limb should ALWAYS be turned the same number of turns when adjusting draw weight. Draw the bow. Follow the same procedure until you get to the desired draw weight. Lowering the draw weight below the lowest rating is NOT recommended as it could cause derailing of the string. On the Hooligan® V2, each full turn of the pair of limb bolts changes the draw weight approximately 2.5 pounds.



LIMITED BOW WARRANTY

What is Covered: We warrant to the original purchaser that our AMS Bowfishing bows will be free from defects in material and workmanship for 1 year following the date of purchase. If we receive notice of a defect during the 1-year warranty period, we will, at our expense (other than shipping charges as discussed elsewhere) and at our option, repair or replace the defective bow.

What is not Covered: This limited warranty does not apply to the bowstring, power cable, cable slide, cam/idler bearings, and defects in the bows cosmetic appearance caused by normal use and wear, such as chips, dings, and scratches. Nor does this limited warranty cover any damage caused by exposure to water or other natural elements or other conditions beyond our control, including, without limitation, any intentional or negligent act, vandalism, abuse, or ordinary wear and tear. Any alterations to the original design of the bow will void all warranties.

THERE ARE NO EXPRESS WARRANTIES THAT APPLY TO THE BOW EXCEPT FOR THOSE GIVEN ABOVE. THE DURATION OF ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THE 1-YEAR GENERAL EXPRESS WARRANTY GIVEN ABOVE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This limited warranty gives you specific legal rights and you may also have other rights which vary from state to state.

OUR LIABILITY FOR ANY LEGAL CLAIM, WHETHER IN CONTRACT, TORT, INCLUDING, BUT NOT LIMITED TO, NEGLIGENCE AND STRICT LIABILITY, WHETHER SOLE OR CONCURRENT, OR OTHERWISE SHALL BE LIMITED TO THE REMEDIES DESCRIBED ABOVE, WHICH ARE YOUR SOLE AND EXCLUSIVE REMEDIES. WE WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL LOSSES, DAMAGES, OR EXPENSES, WHETHER DUE TO BREACH OF CONTRACT, TORT OR OTHERWISE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. No employee, representative, or agent of ours is authorized to alter or modify any provision of this limited warranty or to make any guarantee, warranty, or representation, express or implied, orally or in writing that is contrary to this limited warranty.

Disclaimer: Failure to follow the recommendations and instructions of AMS, LLC, and any privately labeled AMS, LLC brand or any accessory manufacturer could result in serious personal injury to yourself or others, death, or damage to property, the equipment or accessories. By your use of the bow, you acknowledge that AMS, LLC shall not be liable for any injury or damage to person or property, equipment or accessories, by the user or others, resulting from or in any way related to the failure to follow instructions and recommendations.

Service & Repair Information

1. Contact your local archery retailer for service and repair.
2. Or call 715-687-2350 or email customerservice@amsbowfishing.com to obtain a RA number.
 - A. Write RA number on outside of box with name and contact information on a card inside.
 - B. Ship to AMS Bowfishing, 212810 Connor Avenue, Stratford, WI 54484. Enclose a copy of your sales receipt to validate the date of purchase.

NOTE: We recommend using a shipping method that offers you a tracking number. AMS will not claim responsibility for warranty shipments that do not arrive at AMS.



BOW CARE & MAINTENANCE

Read All Warnings and Instructions Before Use

Handle your archery equipment with care and caution or serious injury could result. Your bow fires a projectile that can seriously injure or even kill. Treat your equipment with the respect it deserves. Your safety is important to us, so before you start shooting, please read through the following list of safety information. Buyer and user have the duty to obey all safety rules and laws covering the ownership and use of these archery products

WARNINGS

- Use safety glasses while operating this bow.
- Do NOT point or aim a drawn bow at another person.
- Do NOT shoot straight up or in any other direction that may endanger people or other objects.
- Never point a drawn bow at anything other than a fish or intended target.
- Make sure target area and path to the target are clear before shooting.
- Secure all loose clothing to avoid becoming tangled in the cam mechanism.
- Never Dry Fire your bow! DO NOT DRAW THE BOWSTRING BACK AND RELEASE IT WITHOUT AN ARROW; this could damage the bow and cause serious injury to you.
- If you draw your bow with an arrow nocked on the string and decide not to release the arrow, slowly and carefully “LET DOWN” by allowing your string hand to return the string to its original undrawn position.
- Do NOT draw the bow beyond its maximum draw length. This may cause the string to derail.
- Do NOT allow the bow limbs to touch other objects while shooting or releasing

BOWCARE & MAINTENANCE

- Lubricate your bowstring with a commercial bowstring wax, which can be purchased at an archery pro shop. Wax keeps the individual strands lubricated which reduces friction and wear, prolonging string life.
- Lubricate the cam axles regularly with a drop of lightweight oil. The bearings are self lubricating, so the oil is only a precaution that coats the high-strength axles to prevent oxidation.
- Do NOT expose your bow to extreme heat or prolonged damp conditions such as in your vehicle or boat on hot days. Excessive heat will allow the bowstring and cable to stretch which can affect performance.
- Store your bow properly when not in use. Keep it stored in a bow case that is specifically designed for your bow or hang your bow by the riser in a horizontal position.