


AMS Safety Slide Installation & Line Tying Instructions

Installing AMS Safety Slides – Never shoot an arrow without one!

1. The Shock Pad and Screw must be installed so the head of the screw is up and in line with the bowstring when nocked. It must not bump arrow rest or bow upon release.
2. Push Safety Slide over nock if possible. If not, remove nock and slide Safety Slide on shaft.
3. If an existing 1/8" hole is in line with bowstring and nock it can be used. If no hole is present, use a drill press and drill a 1/8" hole down 4/16" of an inch. **Do not drill completely through arrow.** Drill at least 1" from end of shaft and 1" from other holes.
4. Push small square bushing into shock pad following curvature of both parts.
5. Place shock pad assembly on shaft with "bumper" toward point.
6. Screw should self-thread into hole. Do not thread screw more than once as it will weaken the hole. For added strength, add a small amount of glue to the screw threads. Do not over-tighten the screw.

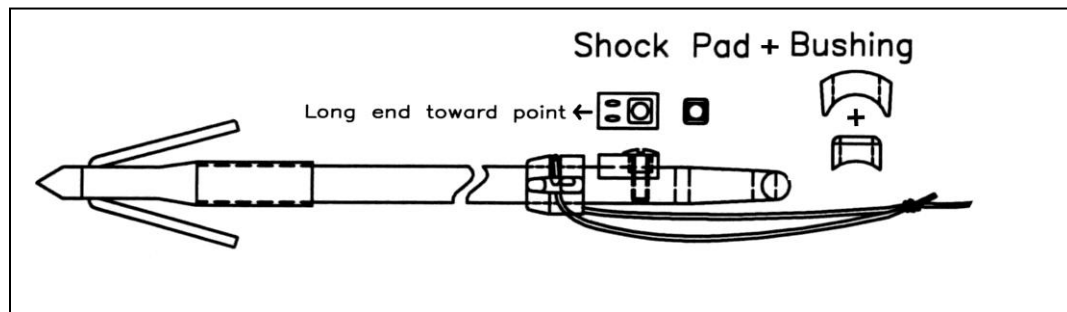

Attaching the bowfishing line to the arrow

1. If there is a Safety Slide attached to the line on your Retriever, remove it. It is a spare.
2. Thread the bowfishing line through the Safety Slide on your arrow following the groove in the slide. Pull about 5" of line through the slide and position the arrow vertically in front of you.
3. Holding both lines, make a loop in the line and hold it above the point.
4. Send the entire arrow, starting at the point, through the loop you made. A knot will form behind the arrow and hang 2 – 3" past it.

