ReAssembling your Retriever

1 Apply a small amount of grease to large Drive Gear [#12] and bearing surfaces. Place Line Guide[#30], Driver Roller [#35] and Alignment Spacers [#32] (long ends up) in Mounting plate.

2 Assemble Side Plate [#18], loosely secure with 1" [#3] screw through Line Guide [#30].

3 Install Trigger Spring [#10] in top holes of mount plate & side plate

4 Assemble Drive Gear, Gear Cover and Handle Shank Assembly (if not already intact).

5 Place gear cover assembly onto side plate. Fasten with one 3/16" screw and two 1" [#3] screws with lock nuts [#8]. Tighten screws.

6 Position Stripper/Bottle Cap Assembly (#31/#26) in place between Mount plate & Side Plate. Secure with one 3/4" screw in bottom hole. Do not tighten.

7 Place Trigger Assembly [#37]. Assemble one stainless steel Trigger Bushing [#7] over 1 1/4" [#4] screw. Assemble screw through Trigger and Reel. Center 1" Trigger Roller in stripper. Assemble second bushing and nut on 1 1/4" screw. Do not tighten.

8 Adjust Guide and Stripper as per adjustment instructions found on page 5. After adjusting, the Trigger Screw should be tightened securely against bushings, do not overtighten. The Trigger is designed to pivot on bushings. All other screws should be tightened.

9 Assemble line retainer [#59] to the tightened line guide screw [#3]. Fasten in place with lock nut [#8]. Use a screwdriver to keep the line guide screw tight while you are snugging the lock nut against the line retainer. Do not overtighten locknut.

#140 Slide Kit for 5/16 Arrow
#141 Slide Kit 2213 Alum. Arrow

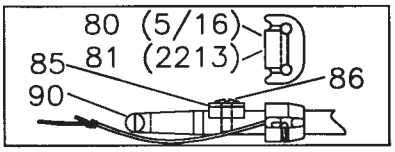

#120 Ring Kit for 5/16 Arrow
#121 Ring Kit 2213 Alum. Arrow

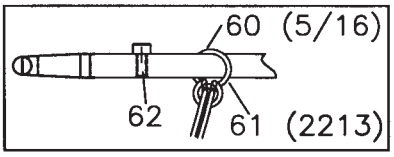

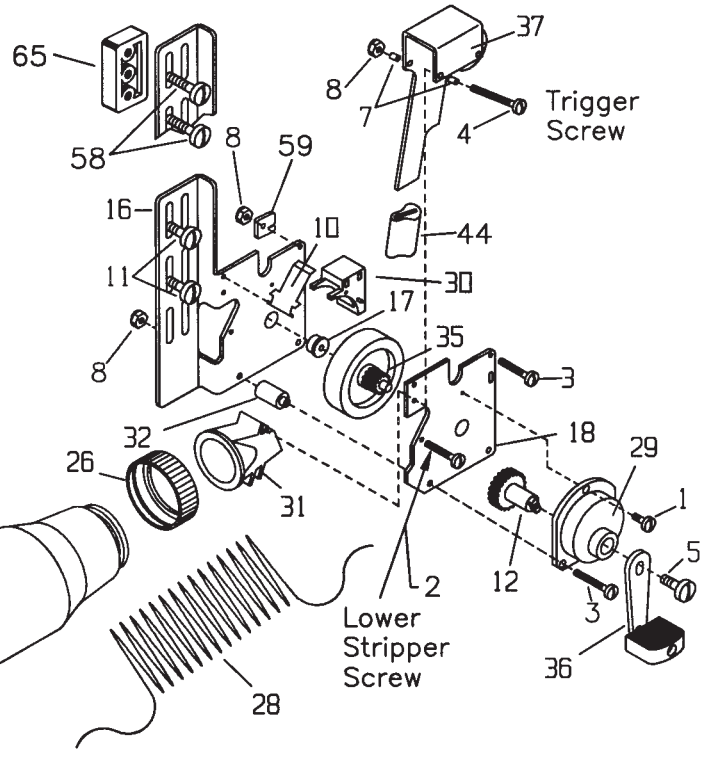

#130 Line Retainer Kit

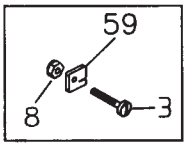

#103 Conversion Kit
Specify Right or Left Hand
Model # 311 Only

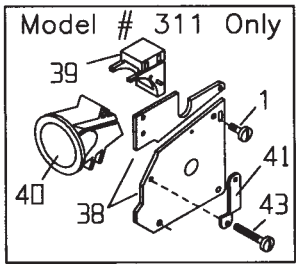

#104 Offset Sight Kit

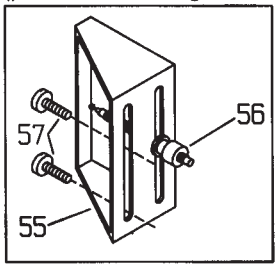
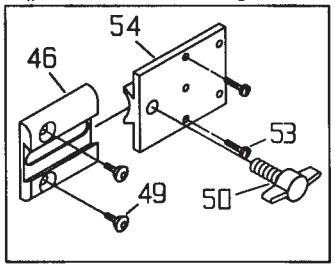
#101 Dovetail Mtg. Kit